


FUSION


HARDWARE GROUP

TOLL FREE CUSTOMER SERVICE 877-215-4683

KNOB

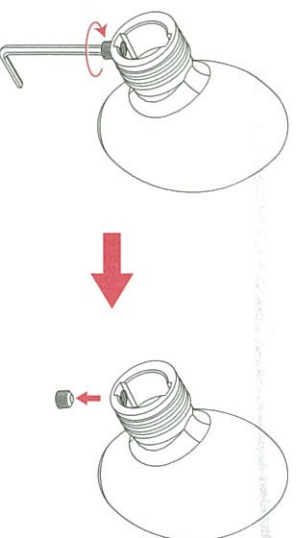

LEVER

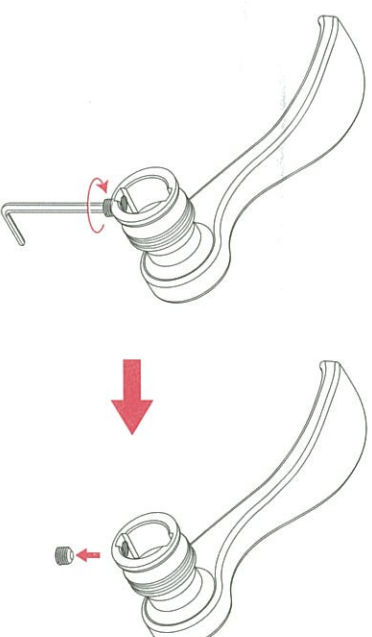



INTERIOR

INTERIOR

Handleset Installation


One-Piece Interior - Interconnect

- 1 Bore lower grip anchor position as indicated by the included bore template
- 2 Install upper Deadbolt latch. It is pre-set for 2-3/8" backset. Adjust as shown for 2-3/4" backset
- 3 Install lower Passage latch into door, first adjusting for appropriate backset
- 4 Place exterior portion of handleset into door, sliding spindle through the installed latch
- 5 Insert Cylinder Core without key into collar, Exterior Rose or plate, and through latch on outside of door with the cylinder core tailpiece laying flat in the horizontal position
- 6 Install deadbolt position mounting plate with two screws into exterior core chassis
- 7 Install interior interconnect chassis with two short finish screws in the lower position, and two longer finish screws in the upper position
- 8 Install knob or lever with set screw
- 9 Install interior anchor for lower grab. Snap on finish cover.

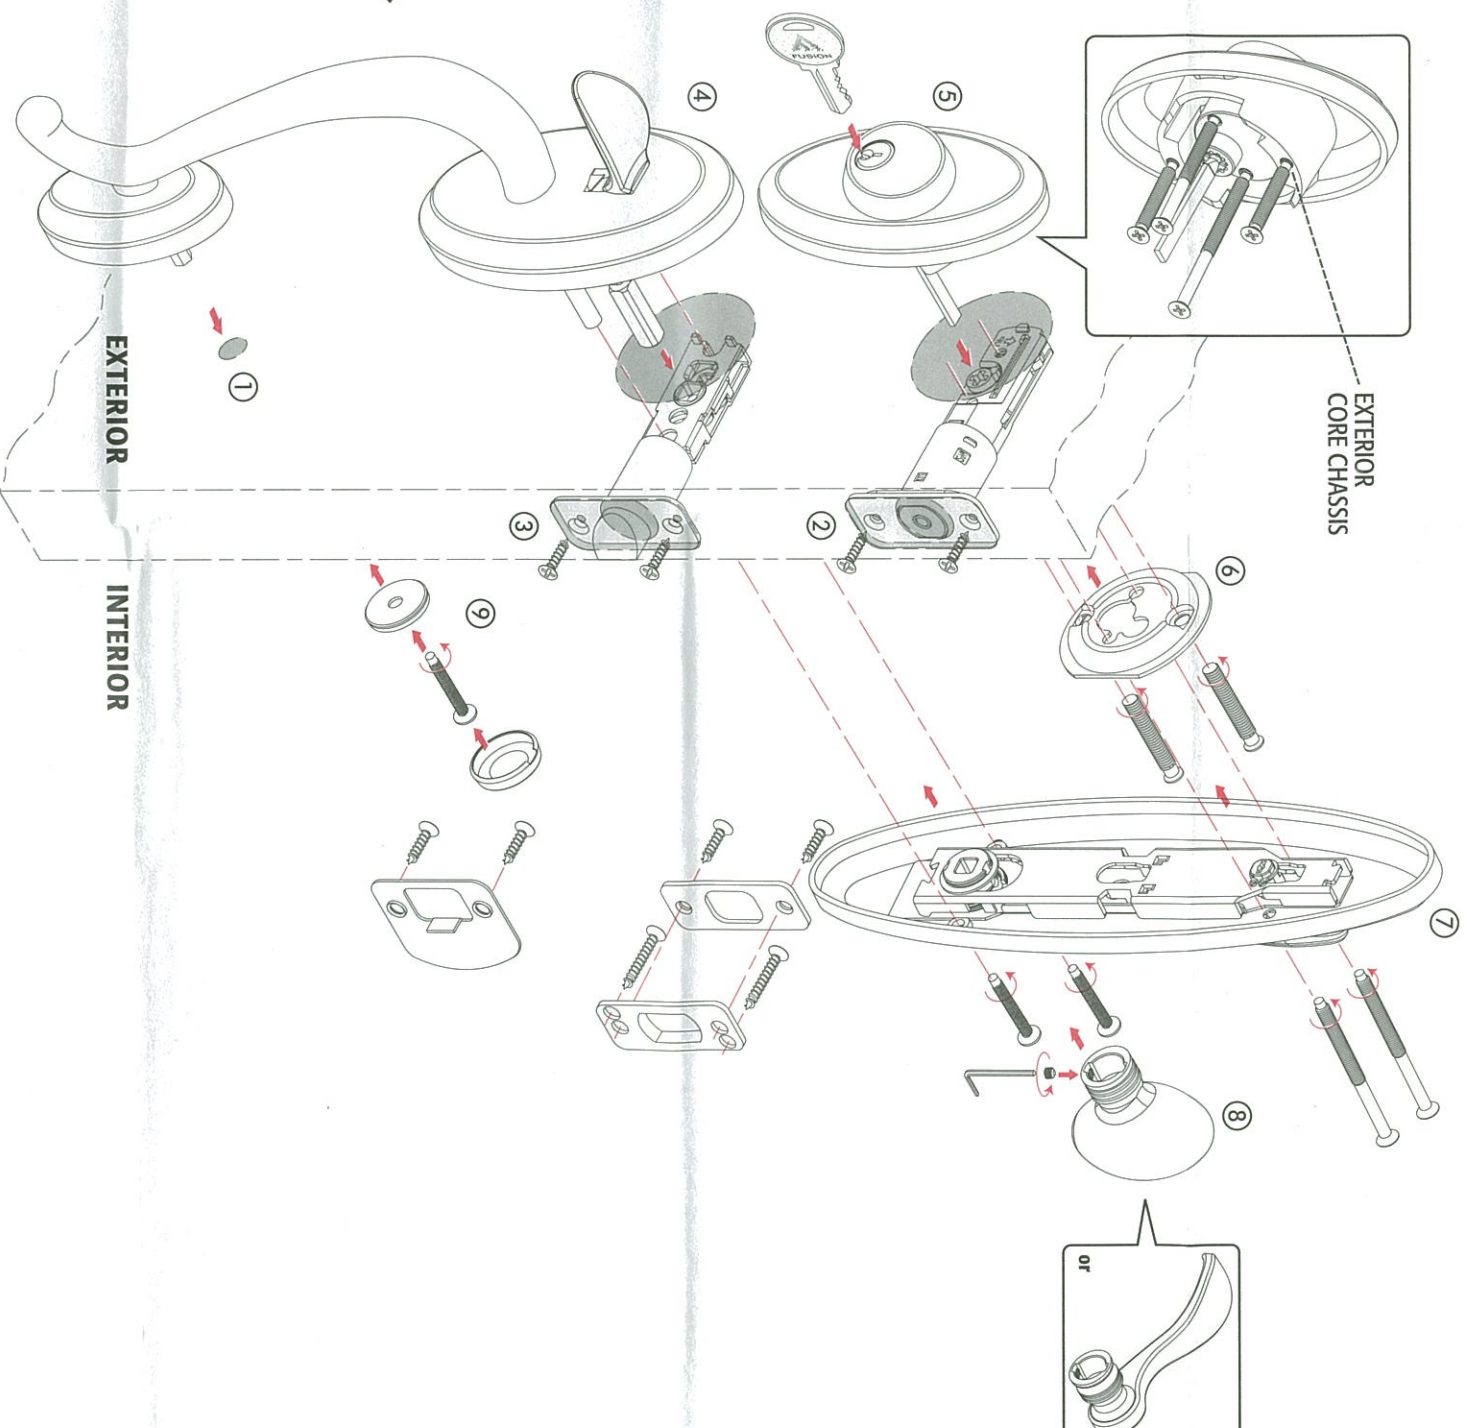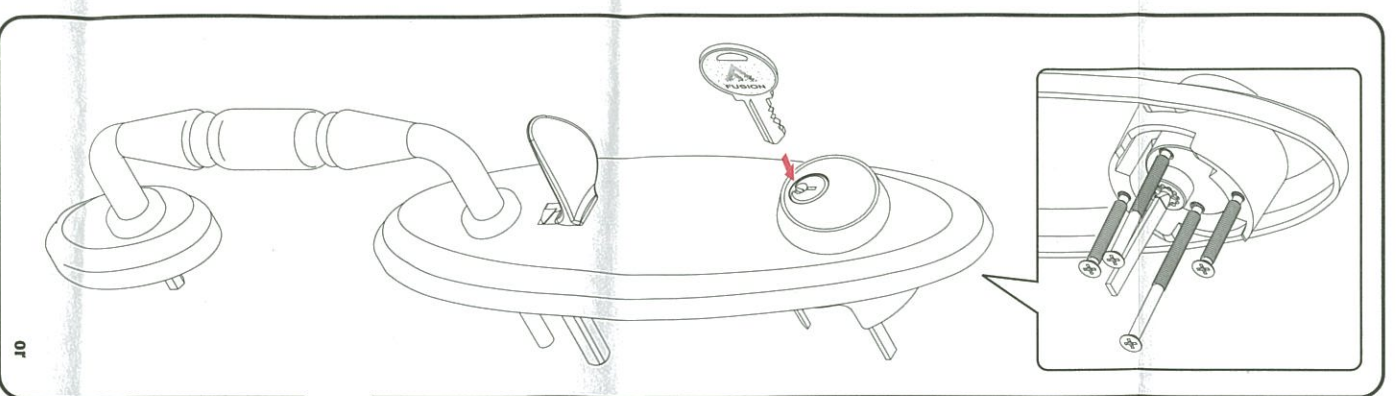


② THIS STEP IS FOR AN ADJUSTABLE DEADBOLT LATCH ONLY
LATCH BACKSET ADJUSTMENT. (Latch backset adjustment only needs to be made if your door needs a 2-3/4" (70 mm) backset. Otherwise NO ADJUSTMENT is necessary.)


For 2 3/8" (60 mm)

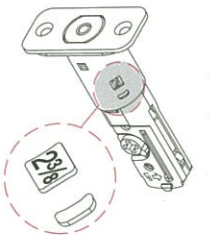


Step 1

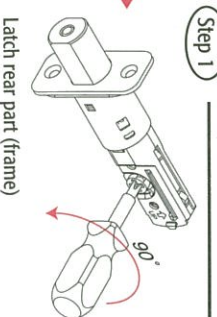

Step 2

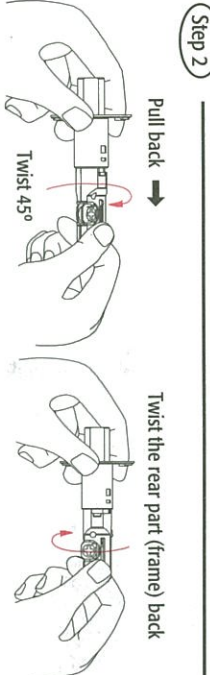

Step 3

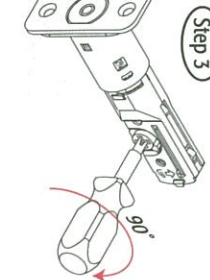

For 2 3/4" (70 mm)

